

# PREP YOUR EXISTING RAILING

Before installing the PSS rail, you may need to make some preparations. If your existing railing has deck posts that extend above the 2x6 top rail, you will need to make some modifications to get the top rail ready.

**Before**




**After**



Trim the deck posts flush with the 2x6 top rail.

If the existing posts are as wide as the 2x6 top rail, you will need to notch the posts to match the profile of the PSS rail.

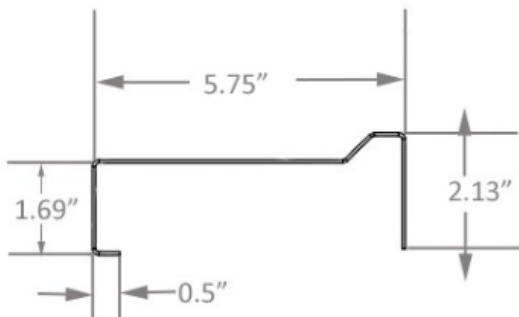

Once these preparations are done, you are ready to install your PSS rail!